

2016
Grenville Fish and Game Club
Skeet Opening and Closing Procedures

SECTION 1 – GENERAL

These Instructions cover the opening and closing procedures for the Grenville Fish and Game Club Skeet range.

All key holders are required to be familiar with these procedures.

1. Revisions

These instructions have been published and revised on the dates listed below:

Original publication –December 1, 2015

SECTION 2 – Opening procedures

1. Ensure that the magazine on the thrower is full. This will minimize the chance of the magazine running empty during a round.
2. Open the window until it contacts the stop.
3. Arm the thrower by moving the switch on the cord to the ON position. If the thrower fails to arm itself proceed to step 4, otherwise skip to step 5.
4. Move the switch to the OFF position and check to see that the power supply is turned on. If it is OFF, turn it on and repeat step 3. If the power supply is turned on, check to see if it is plugged in. If it is not, plug it in and repeat step 3. If the power supply is plugged in, check the breaker panel to see that all of the breakers are in the ON position.
5. Repeat steps 1 through 3 for the low house.
6. Using the remote, check to see that the machines are launching properly.
7. If you must replenish the magazine during a shoot, be sure to place the switch on the cord to the OFF position before attempting to reload the magazine. It is safest to release the arm before attempting to load the magazine.

SECTION 3 – Closing procedures

1. De-arm the thrower by moving the switch on the cord to the OFF position and then, after you have ensured that it is safe, move the switch to the RELEASE position. The thrower will launch a target but will not re-arm itself. When you release the switch, it will return to the off position.
2. Fill the magazine on the thrower so that it is ready for the next person. Only use new targets in the automatic throwers. Targets that have been thrown before are much more likely to break when thrown if reloaded into the automatic throwers.
3. Close the window.
4. Repeat steps 1 through 3 for the low house, ensuring that you replace the nail in the hole to hold the window closed.
5. The interlocking brick path must be swept or blown free of debris and the gun racks placed on the path.
6. Pick up any unbroken clays and place them in an empty box. Place the box of pickup with the clays that are stacked just inside the left hand side of the door on the high house.
7. When you are finished, make sure that the doors on both skeet houses are closed securely and are locked.
8. If there are any problems encountered with the equipment, let the Trap and Skeet Chairman and the club executive know immediately so that repairs may be made quickly.