

2016
Grenville Fish and Game Club
Trap Opening and Closing Procedures

SECTION 1 – GENERAL

These Instructions cover the opening and closing procedures for the Grenville Fish and Game Club Skeet range.

All key holders are required to be familiar with these procedures.

1. Revisions

These instructions have been published and revised on the dates listed below:

Original publication –December 1, 2015

SECTION 2 – Opening procedures

1. Unlock the front doors of the trap house and stake them open. There should be a couple of lengths of re-bar just inside the doors for this purpose.
2. Ensure that the magazine on the thrower is full. This will minimize the chance of the magazine running empty during a round.
3. Un-coil the yellow cord back to the firing line. Arm the thrower by pushing in and turning the first red key on the machine clockwise $\frac{1}{4}$ of a turn. To enable the oscillation function, do the same to the second key.
4. On the outside of the building, move the switch to the ON position to send power to the machine.
5. If you must replenish the magazine during a shoot, be sure to turn OFF the switch on the outside of the building before attempting to reload the magazine.

SECTION 3 – Closing procedures

1. De-arm the thrower by moving pushing the button to launch a clay and immediately turning off the power using the switch on the outside of the building.
2. Fill the magazine on the thrower so that it is ready for the next person. Only use new targets in the automatic throwers. Targets that have been thrown before are much more likely to break when thrown if reloaded into the automatic throwers.
3. Pick up any clay targets that are still in one piece. These can be reused with the manual machines. The interlocking brick path must be swept or blow free of debris and the gun racks placed on the path.
4. When you are finished, make sure that the doors on the trap house are closed securely and are locked. Also ensure that the switch on the side of the building is turned off.
5. If there are any problems encountered with the equipment, let the Trap and Skeet Chairman and the club executive know immediately so that repairs may be made quickly.